

# Flip Mino HD Instructions

## Record

1. Press the power button on the side of the camcorder [A].
2. Press the red button to start/stop recording [B].
3. Gently touch the +/- buttons to zoom in/out [C].

## Play and delete

1. Touch the left/right buttons to select a video [D].
2. Touch the play/pause button to start/pause [E].
3. To delete touch the garbage can [F] and select "Yes" by touching play/pause [E].

## Upload and edit

1. With the camera off, slide down the USB latch to open the USB arm.
2. Connect the camera to a USB port on your computer.
3. To install the software:
  - Mac: locate the file Start FlipShare in Finder. Click on the icon.
  - PC: locate the file Setup\_FlipShare.exe in MyComputer. Click on the icon.Next time you connect the camera to your computer FlipShare will open automatically.
4. Save videos to your computer using the menu at the top of the screen.
5. FlipShare allows you to trim your videos as well as combine them to make a movie. You can also add music.

## Set date and time

1. Start with the camera off.
2. Press the power button [A] and when the Flip Video logo appears press and hold the record button [B].
3. Use + and - buttons [C] to adjust settings.
4. Use < and > buttons [D] to select month/day/year and hour/minute/a.m./p.m.

## Recharge battery

Connect the USB arm to a computer's USB port. When the light stops blinking the battery is fully charged. Charging may take up to 3 hours for a dead battery.

## Connect to TV

Use the TV output port on the camera to connect it to an input port on a TV to watch your videos on a bigger screen.

